

NEVADA GOLD™ PULL TAB DISPENSING MACHINE



Presented By:
Arrow International
Capitol Bingo
Equipment Division
Arrow Games
(Canada)



OPERATIONAL MANUAL

for cash accepting & keypad models

INTRODUCTION

In This Manual

Information in this document pertains to this release of the Arrow International Inc. Nevada Gold™ Pull Tab Dispenser. Modifications are periodically made to the information: any such changes will be reported in subsequent revisions.

The laws that determine the legality of this product change constantly. It is the responsibility of the buyer to determine which products are legal in any given area.

This device is protected by a published international patent application P.C.T. (Patent Co-Operation Treaty) # PCT/CA97/00618

©Copyright Arrow International, Inc. 1998

All trademarks, trade names, and patents are the property of their respective companies.



Arrow Technical Assistance Center

*Protecting Your Investments Through Innovative
Solutions and Support*

Phone Support Hours: 8am to 12am

1-800-277-6214

www.arrowinternational.com

Introduction To Capitol Nevada Gold

Your new Capitol Nevada Gold™ Pull Tab Dispenser is designed using state of the art technology. Its rugged all steel construction, modular design, and exceptional user convenience set it apart from the competition. Benefits include: accurate sales recording, complete security, reduced staff requirements, high speed dispensing, and the capability to play a variety of tickets.

The Nevada Gold™ Pull Tab Dispenser features 1000 ticket capacity per column, vends one, three, four, five, or six window tickets.

The bill validator accepts \$1.00, \$5.00, \$10.00, \$20.00, \$50.00 and \$100.00 denominations and holds a maximum of 600 bills. Your Nevada Gold™ Pull Tab Dispenser is capable of tickets that sell for \$0.10, \$0.25, \$0.50, \$1.00, \$2.00 or \$5.00 denominations.

The bill validator accepts \$1.00, \$5.00, \$10.00, \$20.00, \$50.00 and \$100.00 denominations and holds a maximum of 600 bills.

A “Play All” button enables to user to play all existing credits from any one column up to a maximum of 100 tickets.

The Nevada Gold™ Pull Tab Dispenser offers quick front loading of tickets, and individual modular ticket columns that may be easily removed for service without affecting the operation of other columns.

Security features include: separate keys for tickets and money, an alarm to warn of unauthorized access and theft, and on random select models and models with the printer update kit installed automatic date and time tracking of the last 30 door openings.

INTRODUCTION

Introduction To Capitol Nevada Gold (cont'd)

Cash totals and sales totals are stored in both resettable and non-resettable electronic memory, and are backed up by non-resettable electro-mechanical meters. The electronic memory will hold even when power has been disconnected.

Optional printer upgrade kit allows a single printer to generate hard copy receipt of accounting information for any number of dispensers.

The Nevada Gold™ Pull Tab Dispenser offers years of trouble-free service. However, if a problem arise, our service department provides timely responses on repairs, spare parts, and technical support (see page 11)

Damage Action Process

Your Capitol Bingo Equipment contains delicate electronic equipment. **It is imperative that you thoroughly inspect the contents of the package before accepting product delivery from the carrier.**

In case of severe damage, refuse the equipment from the carrier. Contact your local Arrow International Distributor for immediate replacement.

If the product is damaged but acceptable, make a note on the bill of lading before accepting. Take a photo of the damage before and after unpacking as a record of claim against the carrier. Contact the carrier's agent immediately for inspection. Be sure to obtain a copy of the inspection report for your records.

If these precautions are not taken, we cannot assist you in recovering the amount of the claim against the carrier.

OVERVIEW

- 8** What You Should Know
- 9** Important Safety Info
- 10** Unpacking
- 10** Check Your Shipment

INSTALLATION

- 12** Choose Location
- 13** Wall-Mounting a Unit
- 13** Surface-Mounting a Unit
- 14** Opening Cabinet Doors
- 15** Connect the Battery
- 15** Disconnect the Battery
- 15** About the Alarm

PREPARATION

- 16** Turning On the Unit
- 18** Turning Off the Unit
- 19** Loading Tickets
- 20** Removing Tickets
- 20** Displaying Sample Tickets

BASIC OPERATIONS

- 21** Accessing Menus
- 22** Managing PIN Numbers
- 23** Tracking Sales
- 24** Establish Column Ticket Prices
- 25** Testing Dispensing Unit
- 26** Setting Date & Time
- 28** Tracking Door Openings
- 29** Dispenser Serial Number
- 29** Clearing Established Credits
- 29** Resetting Error Messages
- 31** Emptying the Cash
- 33** Keypad Operations

OPTIONAL VIDEO DISPLAY

- 46** Settings
- 48** Images
- 50** Display Configuration

OPTIONAL REPORT PRINTER

- 51** Generating the Report

PLAYER INFORMATION

- 53** Dispensing Tickets

CARE & MAINTENANCE

- 55** Lubricate Chute Door
- 56** Lubricate Accelerator Roller Shafts
- 56** Cleaning Infrared Sensor
- 57** Cleaning Bill Validator
- 59** Clearing Jammed Bills
- 60** Replacing Ticket Column
- 63** Adjusting for Ticket Thickness

OPTIONAL RANDOM TICKET DISPENSE

- 64** Random Ticket Dispense

TROUBLESHOOTING

- 68** Bill Validator Diagnostics

SPECIFICATIONS

- 69** Physical Characteristics

WARRANTY

- 70** Warranty Information

NOTES

- 73** Notes
- 74** Service Log

Please read the complete



manual before you begin.

The information provided in this document describes the procedures required for successful operation of this unit.

→ Throughout this manual, you will see arrows. ←

Pay particular attention to these sections with the arrows. If you do not follow the instructions correctly, you may adversely affect the operation of your dispenser.

What You Should Know

Before you begin, familiarize yourself with the information in this manual and your model of Nevada Gold™ Pull Tab Dispenser.

Note the following important details:

- The keypad located inside the model is used to maintain the unit.
- You must have a valid Personal Identification Number (PIN) to be able to maintain the unit.
- You should not share your PIN number with others.
- Players cannot dispense tickets if the machine door is unlocked.
- The Nevada Gold™ Pull Tab Dispenser accepts cash from \$1.00 to \$100.00 bills, depending upon the model of your machine.
- Players cannot enter money when a credit of greater than \$100.00 has been established. The green light on the bill collector turns red and no currency is accepted.
- When the player presses the PLAY ALL button and then presses a column button, up to 100 tickets dispense at the column price selected and the remaining credits are displayed. If the price per ticket in the column selected is not evenly divisible by the credits entered, a credit displays after the tickets are dispensed. Enter more money to dispense a ticket for a credit that does not equal the cost of tickets in the machine. For example, if a \$5.00 credit appears in a machine containing only \$2.00 tickets, two \$2.00 tickets dispense and a \$1.00 credit appears. Another \$1.00 is required to dispense the remaining ticket.
- Pressing only one column button allows the players to dispense just one ticket at a time.
- After ticket is vended, remaining credit amount displays in the LCD.
- The bill collector indicator turns green and accepts money once the credits are reduced to \$100.00 or less.
- If you have any questions, call your Arrow distributor or Arrow International for assistance.

Important Safety Information

Some caution must be exercised when using the Nevada Gold™ Pull Tab Dispenser. Read and understand the following important information to ensure safe and prolonged operation of the unit:

- Do not install or use the machine near water or moisture. Take care not to spill any liquids on the machine.
- Do not use any abrasive materials or solvents to clean the machine.
- Do not drop retaining plates in between the ticket columns when removing. A short circuit could result, causing serious damage to the product.
- Do not spill oil on the rubber surfaces of the rollers when lubricating.
- Turn off power to the ticket dispenser before using a vacuum cleaner to clean the inside of the machine
- Do not use a metal crevice tool to vacuum the inside of the unit unless the power is off.
- Use a plastic crevice tool to vacuum inside the unit when the machine is plugged in.
- Use a soft damp cloth with a drop of liquid fabric softener to clean the glass on the unit.

OVERVIEW

Unpacking

To unpack your dispenser, set box upright on a firm level surface. Cut the shipping straps, and lift off the top and remove packaging material. Now dispenser can be moved from the bottom carton to the permanent location.

Take note of the keys and the manual to keep in a safe place.

In order to protect the columns and main door glass during shipping, the adjustable backs of the columns have been taped in place. You should remove the tape before using your dispenser so that you can properly adjust the columns for different ticket lengths. Unlock the main door with the key supplied, and carefully peel off the tape on the side of each column.

Also, remove the cardboard packing from the bill acceptor bill box and remove the cardboard strip from the bill pathway before use.

Whether you wall mount or surface mount the dispenser, keep in mind that a 4-column unit weighs 145 pounds, and an 8-column unit weighs 225 pounds. Use care and get assistance before unpacking and lifting. A minimum of two people are required.

Check Your Shipment

Ensure that your shipment contains the following:

- The correct model of the Nevada Gold™ Pull Tab Dispenser
- Remote keypad (for Nevada Gold™ keypad model ONLY)
- Power supply or power cord (depends on model) for ticket dispenser.
- Two keys to open the cabinet doors
- Two keys to open the bill acceptor and coin collectors (coin collectors are available on selected models only)
- One H-shaped retaining plate per dispensing column
- Leveling feet (you receive four leveling feet with a four column dispenser and eight leveling feet with an eight column dispenser)

Note:

In order to validate your warranty, you must present proof of purchase to Arrow International. Keep a sales receipt or invoice to protect your investment!

See pages 70 and 71 for more details



Arrow Technical Assistance Center

Protecting Your Investments Through Innovative Solutions and Support

Phone Support Hours: 8am to 12am

1-800-277-6214

www.arrowinternational.com


INSTALLATION

Choosing a Location

Before using your Nevada Gold™ PullTab Dispenser, you must ensure that it is properly installed and ready for use. It is important that you position the unit in a safe and secure location.

Make sure that your location:

- Provides accessibility to an electrical outlet to plug in the unit.
- Remains dry.
- User can reach the unit when selecting the wall-mounting option.
- Provides a level surface on which to place the unit when choosing to operate the unit from a table, counter or shelf.
- Provides ample room for both the upper and lower cabinet doors to swing open to the left, to the right, or both.

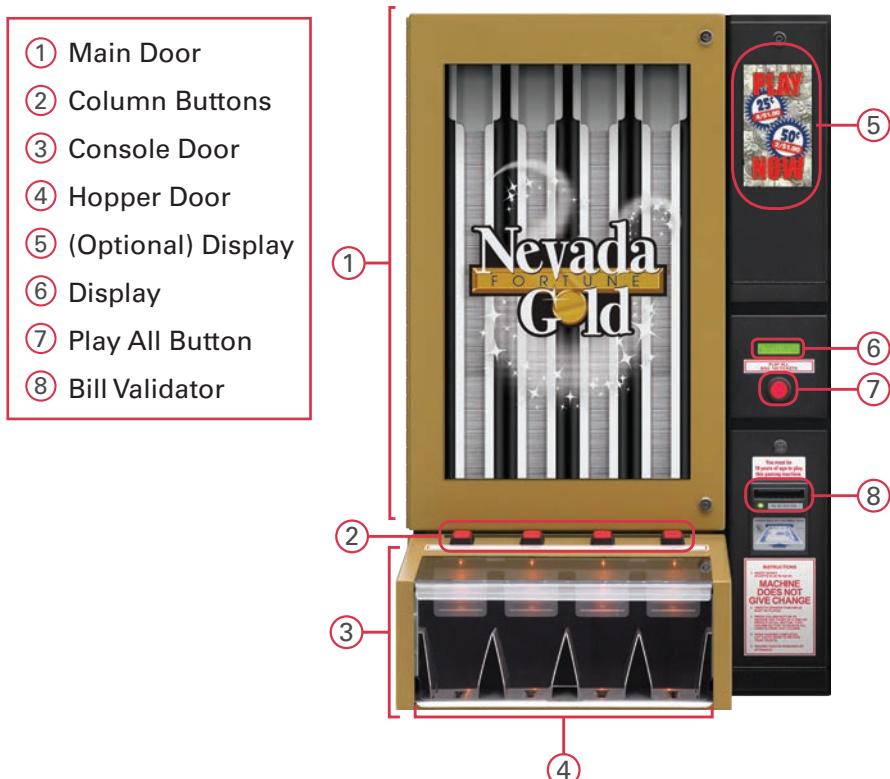

Wall-Mounting the Unit

If you decide to wall-mount the unit, choose a location that allows you to open both the upper and lower cabinet doors after the unit has been mounted. Note that each four-column model weighs approximately 145 pounds before tickets are loaded to keep in mind when deciding where to mount the unit. Also, consider that the height of individual users varies when deciding how high to place the unit.

The unit is designed for wall-mounting based on a 16 inch stud spacing (4 column machine). You require four 5/16 inch diameter lag bolts (or a bolt to fit your wall application) and a socket wrench with extension. Open the cabinet doors. Insert the lag bolts through the mounting eyes in the back of the unit and secure bolts into the wall.

Surface-Mounting the Unit

The dispenser is easily installed on a level surface like a table, counter or shelf. If your surface is not completely level, you can adjust the unit using the leveling feet provided. The leveling feet also protect the surface on which you mount the unit.

Secure the unit to its location using lag bolts or nuts and bolts. Each leg contains a hole designed to allow you to secure the unit in place with a 5/16 inch bolt.

INSTALLATION

Opening the Cabinet Doors

The upper cabinet door contains two locks for security. You must unlock the upper door before opening the lower cabinet door. To open the lower cabinet door, release the lever on the latch located just above the lower cabinet door. The unit appears as follows:



① Ticket Display	⑤ Printer Port
② Wall Mounting Holes	⑥ Console Latch
③ Meters	⑦ Columns
④ Keypad	

Connecting the Battery

When you first receive your Nevada Gold Pull Tab Dispenser, unlock and open the cabinet doors. Plug the unconnected connector shown in the photo to P7 on the Backplane Board.



The Green LED is on by default, it turns off when a ticket is loaded & advanced under the ticket counting sensor of the column. (See page 19 for reference) The display on the console will now read ALARM ACTIVATED ENTER PIN NUMBER.

Disconnecting the Battery

You must disconnect the battery if you are shipping the unit or if the AC power will be shut down for more than 96 hours. Disconnect the battery and tape the connectors to insulate the ends and prevent accidental short circuits.

About the Alarm

The Nevada Gold™ Pull Tab Dispenser is fully alarmed to prevent unauthorized access to the machine and theft.

The alarm operates on a seven second delay and sounds under the following conditions:

- Any door is opened.
- The AC power is disconnected.

Note that on the initial power up of the dispenser, the alarm may also sound. To clear an alarm, open the cabinet door and enter your four digit pin number.


NOTE:

If you do not wish to have the alarm sound during a power failure, don't connect the battery inside the unit. By doing this, however, the alarm will not sound during a theft of the machine, and if a player has credits established when the power fails, the player will not be able to continue playing until power to the dispenser is restored. If you choose to do this, make sure that you tape the battery connectors to insulate the ends and prevent accidental short circuits.

PREPARATION

Turning on the Unit

Once the machine is safely secured to a surface and the battery is connected, follow these steps to turn unit on:

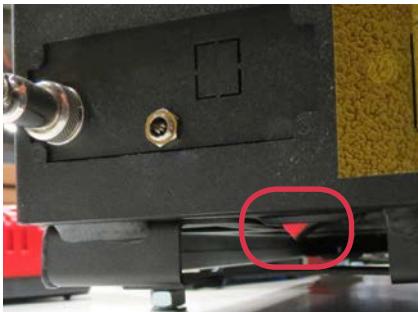

Power Switch Location



Power Switch Unit with Window Lights & Marketing Display

1. **Attach the power supply connector to the left side of the machine.** This connector only fits in one way: do not use force. Plug in the power supply (plug) to a grounded 120V outlet. It is recommended that you plug your dispensing machine into a surge-protected circuit or use a good quality surge-protected power strip.
2. **Press the On/Off switch located under the unit on the left-hand side.** (The LCD backlighting and the interior cabinet lighting will turn on when the unit is switched on.)
3. **Unlock and open the cabinet doors.**
4. If this is the first time you are using the dispenser, and the unit either has the optional printer upgrade kit installed or is a random column select dispenser, the LCD will prompt you to enter the date and time. See page 26 for instructions on setting the date and time. The dispenser will also prompt you to enter the date and time after all power is disconnected from the unit and then reconnected.
5. **Enter your four digit PIN** when the LCD display appears as follows:

ALARM ACTIVATED
ENTER PIN NUMBER

Turning On the Unit (cont)

If this is the first time you are using the dispenser, you must set the column ticket prices before you can dispense tickets. If you lock the cabinet door before establishing ticket prices, the LCD will then display the following:

PRICING NOT SET
GO TO SERVICE

You must unlock the cabinet door and set the ticket pricing. *See page 24 for details.*

If the cabinet door is locked and ticket pricing is set, players can purchase tickets.

Note that the Nevada Gold™ Pull Tab Dispenser is pre-programmed with PIN number 1000 in position 5.

Turning Off the Unit

Use the On/Off switch located on the bottom left corner of the machine to turn off the unit. Turning off the unit does not affect any of the column price settings, electronic totals or PIN number entries, nor does turning off the unit affect the battery backup. If you are going to store the machine for more than 96 hours, disconnect the battery. (see page 15 for reference)

NOTE: If battery is connected, turning the machine off will cause alarm to sound, which requires you to enter your four digit PIN to turn off.

Loading Tickets

The Nevada Gold™ Pull Tab Dispensers can be adapted to fit one window, three window, four window, five window, and six window ticket types, where approved by the government. The tickets vary in size. You can adjust each column to the appropriate ticket size and load up to 1000 tickets per column.


For optimum performance it is highly recommended that only tickets manufactured by Arrow International, Inc. be used in this machine.

Arrow International will not warranty problems resulting from the use of non-Arrow tickets.

Loading Tickets Steps

1. Adjust the dispensing column size, if necessary. Use the tabs located on the back of each column to make the adjustment


- Pinch the upper right-hand tab of the column you wish to adjust.
- Pinch bottom left-hand tab of the same column.

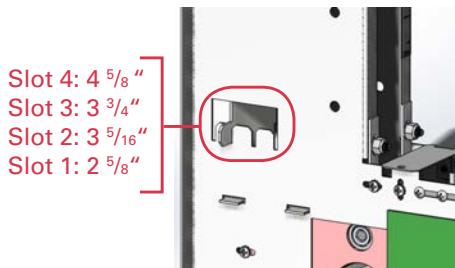

2. Load a single ticket. Make sure that both the upper and lower cabinet doors remain open.

Starting at the top of the column, slide a ticket down the chute until it reaches the lowest point. Rotate the large white gear at the bottom right of the column to advance the front edge of the ticket approximately one half to one inch into the feeder. No further adjustments for size are required. The front edge of the ticket remains lower than the back edge. **Note the ticket should be sitting at an angle when loaded properly.** If the ticket is laying flat the column back is not in the proper slot.

3. Fill the column. First, check to see how the tickets bend. To prevent tickets from jamming and to ensure that tickets vend smoothly, make sure tickets are loaded as illustrated. Reference label on inside of cabinet door for ticket loading.

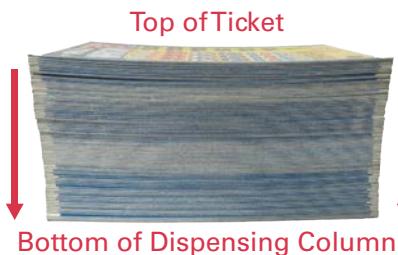


The opening at the top of each column allows you to enter stacks of tickets. Grasp a manageable stack of tickets. Slide the stack down the chute. Continue to load tickets until the column is full. All tickets in one column must be of the same value.

PREPARATION

Loading Tickets Steps (cont'd)

4. **Replace the retaining plate.** Once the column is filled, you must ensure that tickets placed in the wide entry slot do not fall out. Use the retaining plates (shaped like an H) to secure tickets as follows:
 - Place one hand in front of the tickets loaded in the top part of the column.
 - Take the H-shaped retaining plate in the other hand.
 - Insert the retaining plate in the slots at the top and behind the guide bar at the bottom.
 - Lock the retaining plate into the slots at the top of the column.

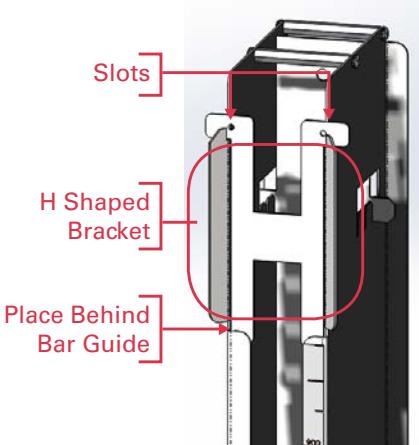

Removing Tickets

You can remove any tickets that do not load properly down the chute. Remove the H-shaped retaining plate. Slide the ticket or tickets back up to the top and out the wide entry opening. Reload the tickets. Replace the retaining plate.

Displaying Sample Tickets

A display rack contained in the upper cabinet door provides room and visibility to display sample tickets. Place a ticket in the ticket display so that when the door is closed the ticket type displays in front of the particular column from which the tickets will be dispensed.

BASIC OPERATION (CASH)

The following pages explain the basic operation for the Nevada Gold™ cash accepting models. For instructions on Nevada Gold™ keypad models, please turn to page 32.

Accessing Menus

The LCD (liquid crystal display) located on the outside of the upper right cabinet (as looking at the machine) provides the menu information for maintaining your Nevada Gold™ Pull Tab Dispenser.

When doors are locked and machine is ready to dispense tickets, LCD message appears as follows on models that accept only bills:

**INSERT BILL
NO CHANGE GIVEN**

To set up or make changes, unlock the upper cabinet door and use the keypad located inside the door to program the changes. Once you open the door, the ENTER PIN NUMBER prompt displays.

If you are using the dispenser for the first time, enter PIN number 1000 and then press #. Otherwise, enter your own PIN number and press #. The Main Menu will then appear:

**PINS-1 TOTALS-2
PRICE-3 MORE-#**

Pressing # will then bring up the following display:

**TEST-4 CLOCK-5
DOOR-6 PRINT-7**

BASIC OPERATION (CASH)

Accessing Menus (cont'd)

Pressing * will return you to the previous screen.

- Enter 0 to clear credits that have not been played
- Enter 1 to add, change or delete PIN numbers. See below.
- Enter 2 to view the total number of tickets dispensed for each column and an accumulated total, as well as the total currency collected. See page # 23.
- Enter 3 to set ticket prices for each column. See page # 24.
- Enter 4 to dispense tickets in a test mode. See page # 25.
- Enter 5 to set the date and time. See page # 26.
- Enter 6 to display the last 30 door openings in reverse chronological order. See page # 28.
- Enter 7 to print out an accounting report. See page # 51.
- Enter 8 to view units serial number. See page # 29.

TEST-4	CLOCK-5
DOOR-6	PRINT-7

Managing PIN Number

You can add, change or delete up to five different PIN numbers. You cannot access menu functions unless at least one PIN position contains a valid PIN number. 0000 is not a valid PIN number. Press 1 to select the PIN function. The PIN Menu displays.

To add or change a PIN number press *. NEW PIN displays. Enter the new PIN number or enter 0000 to delete a PIN number for that position. Press the # key to advance to the next position. After you modify the PIN number, press the # key. When you reach the last PIN position, the display returns to the Main Menu.

Tracking Sales

The Nevada Gold™ Pull Tab Dispenser records the total number of tickets dispensed from each column and gives a sum total of all tickets dispensed. The dispenser accumulates a total of all currency accepted. To review the Totals Menu, press 2 from the Main Menu.

To display the total ticket sales, press 1, TOTAL FOR COLS. The total for the first column displays, where xx is the column number and 0000000 displays the actual number of tickets dispensed from that column. This amount is not erasable or resettable.

When you press # again, the resettable total appears. Pressing * will reset the total. Press # to advance to the next non-resettable column total. Pressing # again will advance you to the next resettable total. Once all columns are displayed, press # to display the non-resettable TOTAL ALL COLUMN amount. Press # again to display the resettable TOTAL ALL COLUMN amount. Pressing * resets to zero.

Note that the Nevada Gold™ Pull Tab Dispenser is also equipped with two meters located inside the main cabinet door. The TOTAL ALL COLUMN amount equals the amount displayed on the bottom meter.

To track the total value of currency accepted, press 2, TOT FOR CASH, from the Totals Menu. The screen displays, where \$0000000.00 is the actual currency total:

TOTAL FOR COL 1
0000000

RESETTABLE COL 1
0000000

TOTAL CASH
\$0000000.00

Press # to proceed to RESETTABLE TOTAL CASH. Pressing * resets the cash total to zero, while pressing # returns you to the main menu.

Note the top meter located inside the main cabinet door matches the TOTAL CASH amount. If your machine accepts 25¢ coins, the top meter amount will be accurate within 75¢. For example, \$475.75 appears as \$475.00.

BASIC OPERATION (CASH)

Establishing Column Ticket Pricing

The Nevada Gold™ PullTab Dispenser is shipped with six preset ticket values: ten cents, twenty-five cents, fifty cents, one dollar, two dollars or five dollars. Players select amounts to match the ticket value. **You must set the column amounts to equal the value of the tickets placed in the column.**

- Columns are numbered from left to right, beginning with column 1 on the far left.
- A column must display a value greater than \$0.00 to dispense tickets.
- A column must contain all tickets of the same value; for example, all tickets in column one must cost \$0.50.
- Set the price for the tickets one column at a time.
- **If the price set for the column does not match the price of the ticket, sales will not correctly represent the price of the ticket.**

From the Main Menu, Press 3. The Pricing Menu appears:

Press the * key to select a preset value. When the proper amount displays, press the # key to advance to the next column. Repeat this step until all of the columns are priced. When you have finished entering the ticket prices, press the # key to return to the Main Menu. **All columns must have pricing set in order for the dispenser to enter vend mode.**

Note that on random select models, a minimum of two columns must be set to the same price before the unit can dispense tickets.

Testing the Dispensing Unit

The test feature allows you to ensure that tickets dispense accurately without affecting the actual total counters. Use the test mode to empty a column or columns prior to loading a different ticket type or prior to transporting the machine. Note the following:

- The total number of tickets dispensed displays while in this mode.
- You cannot test vend more than 100 tickets at a time.
- If you request more tickets than are available in the column, the column empties, the column dispensing mechanism shuts off and the total number of tickets dispensed displays.
- Totals do not accumulate in memory.
- Columns are numbered from left to right, beginning with column 1 on the far left.

From the Main Menu, Press 4. The Test Vend Menu appears:

SELECT COLUMN
000 PRESS #

Close the lower cabinet door.

1. Enter the test column number.
2. Enter the number of tickets you want to dispense.
3. Press # for tickets to dispense into the stacking compartments.

BASIC OPERATION (CASH)

Setting the Date & Time

(Random Column Select or Printer Upgrade Installed Only)

NOTE: Requires battery to be connected to retain date & time
(see page 15)

From the main menu, press 5. If your dispenser is not a random column select or doesn't have the optional printer upgrade kit installed, the following appears:

**CLOCK OPTION
REQUIRED**

After a delay, the LCD will automatically return to the main menu.
(Contact your local Arrow Distributor if you would like this option.)

Otherwise, the date and time currently in the unit will display:

**FRI APR 17 2003
00:00:00 PRESS #**

Pressing # will return you to the main menu whereas pressing * will allow you to set a new date and time.

Press *, and the following screen will appear:

**MONTH:
PRESS #**

You can now enter the applicable month in numerals
(e.g.: Jan - 01, Feb - 02, etc.)

Press #, and the following screen appears:

**DATES:
PRESS #**

You can now enter the correct date of the month(1-31) and press # when you are finished.

BASIC OPERATION (CASH)

Setting the Date & Time (cont'd)

After setting the date of the month and pressing # you will see that the following screen appears:

YEAR:
PRESS #

Enter the correct year
(i.e.: 2015) and press #.

After pressing # the following screen appears:

ENTER HOURS:
PRESS #

Enter the correct hour in 24-hour
format (i.e.: 0-23) and press #.

After pressing # the following screen appears:

MINUTES:
PRESS #

Enter the correct minutes (0-59)
and then press #.

The following screen will show the changes you have made:

FRI APR 17 2003
11:46:45 PRESS #

From the main menu press 5 to re-check the date and time settings.

The date and time will re-display. If they are correct, press # to return to the main menu, otherwise press * to enter the correct date & time.

BASIC OPERATION (CASH)

Tracking Door Openings

On units that are either random column select or have optional printer upgrade kit installed, the dispenser automatically tracks the date & time of the last 30 door openings in reverse chronological order.

From the main menu press 6. If your dispenser is not a random column select unit or does not have the optional printer upgrade kit installed, the following will appear:

CLOCK OPTION
REQUIRED

After a delay, the LCD will return to the main menu. (Contact your local Arrow Distributor if you would like this option.)

Otherwise, the following screen will appear:

FRI APR 17 2003
00:00:00 POS# 01

This shows the date and time of the last door opening by the person with a valid pin number in position # 1 (See page 22 for more details on PIN numbers and Positions).

Press # to show you the second last door opening. Press # again to show you the third last door opening, and so on. At any time while viewing door openings, pressing * will return you to the main menu.

If an invalid PIN number is entered upon opening the door, the display will show the date and time. Note that a valid POS # was not entered.

FRI APR 17 2003
00:00:00 POS# 00

Reading The Dispenser's Serial Number

From the main menu, press 8. The machines serial number will appear on the LCD which will match the serial number on the identification tag on the lower left hand side of your unit. Pressing # will take you back to the main menu.

Clearing Established Credits

If you wish to clear any credits established in the dispenser without dispensing tickets, from the main menu press 0, and the following will then appear on the LCD:

CLEAR CREDITS
1 – YES 2 – NO

Press 1 to clear the established credits or 2 if you do not want to.

Resetting Error Messages

Error messages appear for two reasons: a empty ticket column or a malfunction in a column has occurred. This section describes how to correct the problem in these situations. The first time the problem is detected, the LCD displays the total number of credits remaining:

\$0.00 CREDIT

If the player selects again from the same column, the LCD will then displays the following prompt:

COLUMN EMPTY
OR MALFUNCTION

When the message appears because an empty column has been selected, another column must be chosen to continue.

BASIC OPERATION (CASH)

Resetting Error Messages (cont'd)

Reset the column empty message before resuming play:

1. Unlock and open the upper cabinet door.
2. Enter your PIN number.
3. Load tickets. (See page 19 for details.)
4. Close and lock cabinet door.
5. Resume play (Note that when you reload the column with tickets, the player does not lose any credits.)

If the message appears for a reason other than an empty ticket column, you must first determine the reason for the malfunction. Tickets will not dispense for one of three reasons: a ticket jam, a misaligned sensor, or a dirty sensor.

Refer to pages 41-42 for instructions on resetting error messages for ticket jams and misalignment of a sensor.


Emptying the Cash

In order to empty the cash from the bill acceptor, follow these steps:

1. Unlock main cabinet door and swing out of the way.
2. Open console door and swing out of the way.
3. Unlock and open the bill acceptor door.
4. Remove the cassette from the bill acceptor by pressing your fingers against both cassette latches. At the same time, rotate the cassette at an angle of about 15-20 degrees.
5. Pull the cassette off of the bill acceptor.
6. Open the cassette by rotating the lever at the back of the cassette, and remove the bills.
7. Reinstall the cassette.
8. Close and lock door.

If your dispenser is equipped with a coin acceptor (selected models only), complete the following steps to empty the coins:

1. Unlock and open the coin acceptor door.
2. Remove empty the coin box.
3. Reinstall the empty coin box.
4. Close and lock the coin acceptor door.

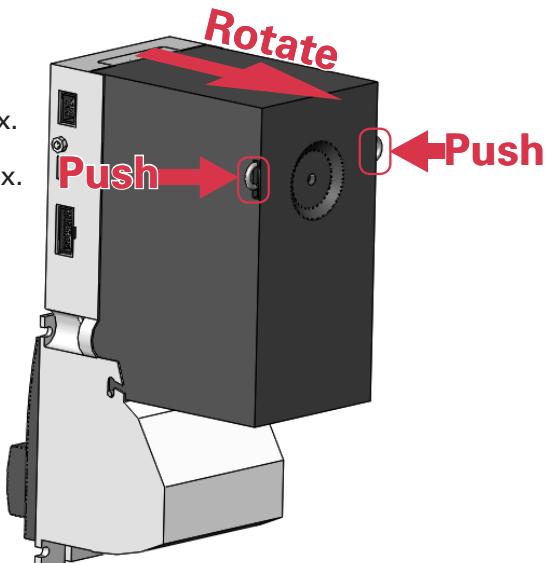

Keypad Operation

On the following pages, directions are included for the Nevada Gold™ Pull Tab Dispenser with keypad. Although many of the components are similar in



cash accepting machines and keypad models, there are some differences that apply to one machine type or the other. Please keep this in mind as you begin to operate your machine.

BASIC OPERATION (KEYPAD)



With the Nevada Gold™ Pull Tab Dispenser with the keypad you can:

- Add, change or delete Personal Identification Numbers (PIN)
- Assign a security level to each active PIN number
- Track the total number of tickets dispensed from each column
- Adjust the timeout setting
- Adjust ticket pricing for each dispensing column
- Test ticket dispenser for accuracy without affecting actual ticket count

The LCD (liquid crystal display) located on the keypad provides the menu information for maintaining your Nevada Gold™ Pull Tab Dispenser. To program the unit, you must unlock the main console door and make the necessary changes using the keypad. Before opening the door, make sure that the ENTER PIN NUMBER screen displays. The screen displays when the timeout period expires or when you press the # key. The display appears as follows:

ENTER PIN NUMBER

If you are using the dispenser for the first time, enter PIN number 1000 and then press #. Otherwise, enter your own PIN number and press #. The Main Menu will then appear:

PINS - 1 TOTAL-2
TIME - 3 MORE - #

- Press 1- add, change, delete PIN
- Press 2- view total # of tickets dispensed
- Press 3- adjust timeout setting
- Press 4- display additional menu items

BASIC OPERATION (KEYPAD)

Assigning PIN & Security Levels

You can assign up to 25 different PIN numbers and with options of three different security levels to choose from.

- The first PIN number and security code are pre-assigned. Use PIN 1000 the first time you program the unit.
- You cannot access menu functions unless at least one PIN position contains a valid PIN number with a level 2 security.
- 0000 is not a valid PIN number.
- The security levels are:
 - 0 - No access (this is the default)
 - 1 - Access to vending functions only
 - 2 - Access to vending, accounting and programming functions
- Most users are assigned level 1 security.
- Assign a security level of 0 (no access) to any invalid PIN number.

To access the Main Menu, use PIN number 1000 the first time you program the unit. Otherwise, enter your PIN. Press 1 to select the PIN function. The PIN menu displays. POS is the Position number from 1 to 25; PIN is the four digit Personal Identification Number; and SEC is a Security level of 0, 1 or 2:

POS	PIN	SEC
##	#####	#

The Position automatically displays. The PIN number and Security levels display zeros, when the position is available. Otherwise, the PIN number and SEC level number assigned to the position appear.

To add, change or delete a PIN press *. The NEW PIN screen displays:

NEW PIN
0000

Enter the new PIN number or enter 0000 to delete an existing PIN number.

BASIC OPERATION (KEYPAD)

Press the # key to advance to the Security level screen:

**SEC
0**

Enter the level of security (0, 1 or 2) assigned to the PIN number. Press #.

Press the * key to make changes to the current screen. Press the # key to advance to the next position. You must scroll through all 25 positions even if you do not need to enter PIN and security information in each position. The Main Menu appears after position 25 appears.

Tracking Ticket Sales

The Nevada Gold™ Pull Tab Dispenser records the total number of tickets dispensed for each PIN and tracks the total number of tickets dispensed from each column. It is recommended that you use a Daily Control Sheet to record the ticket count and reconcile your sales (check with your State Agencies for requirements). To review or reset the totals, press 2 from the Main Menu. The Totals Menu appears:

**TOT FOR PINS - 1
TOT FOR COLS -2**

Press 1 to display the total ticket sales for each PIN position.

Press 2 when the Totals Menu appears to display the total ticket sales for each column.

Displaying Ticket Sales by PIN Position

is the PIN position number from one through 25, and 00000.00 displays the actual dollar amount:

PIN # # \$00000.00

Press the # key to advance to the next PIN position. Continue to press the # key until you scroll through all 25 PIN positions. The Main Menu appears.

Tracking Ticket Sales (cont'd)

Displaying Ticket Sales by Column Number

Press 2 when the Totals Menu appears to display the total ticket sales for each column. ## is the COLUMN number and 0000000 displays the total number of tickets dispensed from the particular column:

TOTAL	COL # #
0000000	

Press the # key to review each column total. After each column total displays, the TOTAL ALL COLUMN appears. When you press # again, the re-settable total appears. Press * to reset total. Press # again to return to Main Menu. The TOTAL ALL COLUMN display provides a non resettable sum of the totals of each column.

Adjusting the Timeout Section

The Nevada Gold™ PullTab Dispenser allows you to select the length of time from when you complete a ticket sale to the time when the ENTER PIN prompt automatically appears. Consider the following:

- The Pull Tab Ticket Dispenser is initially set with a 45 second timeout period.
- No timeout or a timeout setting of 000 provides unlimited access until the operator logs off by pressing the # key following the completion of a transaction. This is not a secure means of vending. Use a short setting in situations where several operators have continuous access to the machine.
- Use a longer setting if only one person is responsible for vending or constant supervision of the PullTab Ticket Dispenser is provided.
- The minimum timeout setting is 003 seconds.
- The maximum timeout setting is 255 seconds.

Adjusting the Timeout Section (cont'd)

If you want to adjust the timeout, press 3 from the Main Menu. The Timeout Menu will then appear as seen below:

**TIMEOUT
000 SECONDS**

Enter the desired number of seconds. Press the # key to return to the Main Menu.

Selecting More Options

Selecting # from the Main Menu allows you to perform two more programming functions. Adjusting the Ticket Pricing and Testing the Dispensing Unit. The menu appears as follows:

**PRICE - 4
TESTVEND - 5**

Establishing Ticket Pricing

The Nevada Gold™ Pull Tab Dispenser is preset with four values: ten twenty-five cents, fifty cents, one dollar or two dollars. Players select amounts to match the ticket value. Remember:

- Columns are numbered from left to right, beginning with column 1 on the far left.
- Column must display a value greater than \$0.00 to dispense tickets.
- A column must contain all tickets of the same value; for example, all tickets in column one must cost \$0.50.
- Set the price for the tickets one column at a time.

BASIC OPERATION (KEYPAD)

Selecting More Options (cont'd)

From the More Menu, Press 4. The Pricing Menu appears:

COL	PRICE
01	\$0.00

Press the * key to select a preset value. When the proper amount displays, press the # key to advance to the next column. Repeat this step until all of the columns are priced. When you've

finished entering the ticket prices, press the # key to return to the Main Menu.

Testing the Dispensing Unit

The test feature allows you to ensure that tickets dispense accurately without affecting the actual total counters. Use the test mode to empty the machine prior to loading a different ticket type or prior to transporting the machine. Note the following:

- The total number of tickets dispensed displays while in this mode.
- You cannot test vend more than 100 tickets each time you dispense.
- The unit allows you to empty the column.
- If you request more tickets than are available in the column, the column empties, the column dispensing mechanism shuts off and the total number of tickets dispensed displays.
- Totals do not accumulate in this mode.
- Columns are numbered from left to right, beginning with column 1 on the far left.

From the More Menu, press 5. The Test Vend Menu appears.

SELECT COLUMN
000 PRESS #

Close the lower ticket console door. Enter the test column number followed by the number of tickets you want to dispense and press #. The tickets dispense into the stacking compartments.

Dispensing Tickets

You can begin to dispense tickets once you turn on the Pull Tab Ticket Dispenser and lock the cabinet doors. If you have not set the ticket pricing, the message PRICING NOT SET GOTO SERVICE appears.

You must enter your four digit PIN number to dispense tickets. After you enter your four digit PIN number, the message ENTER IN NUMBER **** will appear.

Each time you enter a PIN number, **** displays instead of the actual number. Press # to advance to the next display.

Selecting the Dispensing Column

After you enter your valid PIN number, you must select the column from which to dispense tickets. The display on the screen says SELECT COLUMN \$00.00 PRESS #.

Enter the number of the column from which the tickets are to dispense. Columns are numbered from left to right, beginning with column 1 on the far left. If you select the wrong column, press * to return to the column display. Otherwise, the column number selected displays and you can enter the dollar value of the tickets for dispensing.

Entering a Value

Once you have entered a valid PIN number and selected a column from which to dispense tickets, you must enter the value of the tickets for vending. Note the following:

- You must enter a value that is divisible by the ticket price for the column. For example, if column 1 is priced for \$0.50 tickets and you enter \$4.75, the value remains at \$00.00 until a valid amount is entered. In this case, you must enter value in fifty cent increments for the tickets to dispense.
- The maximum number of tickets dispensed per transaction is 100; for example you can vend up to \$50.00 worth of \$0.50 tickets.

BASIC OPERATION (KEYPAD)

Dispensing Tickets (cont'd)

Entering a Value

Once you successfully dispense the tickets, you have three choices:

1. Select another column number from which to vend and then enter the value of the tickets for dispensing.
2. Allow the machine to return to the ENTER PIN NUMBER screen after a timeout occurs.
3. Press the # key to return to the ENTER PIN screen immediately.

Display Total Sales

The PullTab Ticket Dispenser also allows you to view the total value of all of the tickets dispensed using your PIN. At the ENTER PIN display, enter your PIN and then press *. The screen appears with the message YOUR TOTAL IS \$00000.00 (with the actual total value displayed).

Resetting Error Messages

Error messages appear for two reasons: low ticket inventory or a malfunction in a column has occurred. This section describes how to correct the problem in each of these situations.

When an error occurs, the seller is alerted by an audible alarm. The display shows the message COLUMN FAULT PRESS ANY KEY.

Pressing any key will cancel the alarm and take you to the next screen that shows you what the value was actually dispensed. You then press any key and will be returned to the column selection screen that reads SELECT COLUMN \$00.00 PRESS #.

That particular column may not be used until the cabinet door has been opened and closed. You must determine the cause of the fault.


BASIC OPERATION (CASH & KEY)

Resetting Error Messages (cont'd)

If the error message appears for a reason other than an empty ticket column, you must first determine the reason for the malfunction. **Tickets will not dispense for one of three reasons: a ticket jam, a misaligned sensor, or a dirty sensor.**

To reset an error message resulting from a ticket jam:

1. Unlock and open the upper cabinet door.
2. Enter your PIN number.
3. Locate the column with lodged ticket.
4. Turn the large white gear to the right of the column with the jam until ticket can be removed.
5. Remove the ticket.
6. Close and lock cabinet door.
7. Resume play.

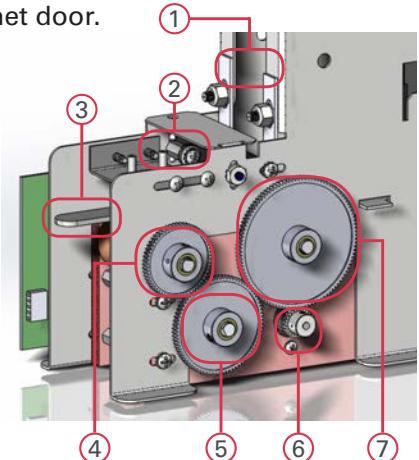



① Ticket Gate	⑤ Transfer Shaft Gear (62213)
② Optical Ticket Sensor	⑥ Motor Drive Gear (62211)
③ Accelerator Shoe	⑦ Rear Roller Gear (62214)
④ Front Roller Gear (62212)	

BASIC OPERATION (CASH & KEY)

Resetting Error Messages (cont'd)

To reset an error message caused by a possible misalignment of a sensor:

1. Unlock and open the upper cabinet door.
2. Enter your PIN number.
3. Determine which sensor is out of alignment. Note that the sensor must face down towards the ticket.
4. Remove the guard above the sensor by removing the nut attaching the guard with a 5/16" open end wrench.
5. Align the sensor above but not touching the ticket. The bottom of the sensor is 1/8 inch to 1/4 inch above the ticket. Use a 1/4 inch wrench and a Phillips screwdriver to tighten. Sensor operation can be checked by using the large white gear to move the ticket back and forth under the sensor. The green light on the back plane will be on if no ticket is sensed and off if there is a ticket underneath.
6. Reinstall the sensor guard.
7. Test the column (see page 25).
8. Close and lock cabinet door.
9. Resume play.

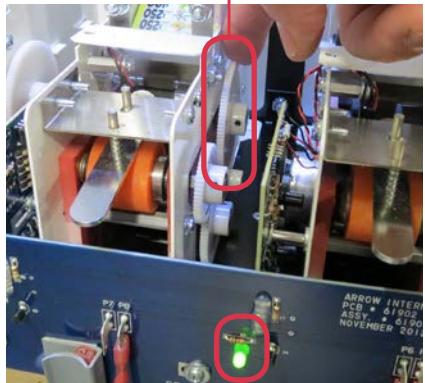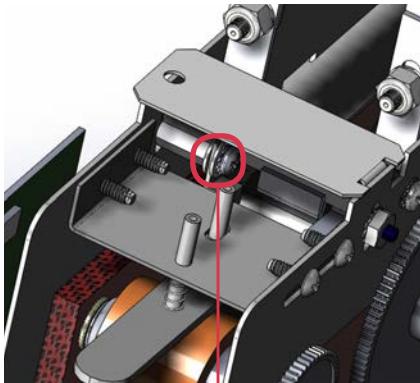

Optional Features Available

On the following pages, directions are included for the optional features not standard with Nevada Gold machines. These features include the optional Video Display and the optional Printer Report.



For more information regarding these features, contact your local Arrow distributor.

OPTIONAL VIDEO DISPLAY

Optional Video Display

If your dispenser has the optional video display installed, the unit is capable of presenting fixed images in JPG format and video with sound in DIVX AVI format.

Specifications

- LCD resolution: 800x480, contrast and brightness adjustable
- Working temperature: -10°C -- 40°C
- Humidity: 10% - 80%
- Storage temperature: -20°C - 70°C
- Voltage: Adapter: AC 90V-240V~50/60HZ; Player: DC12V
- Current: 360mA-600mA; Sleep: 210mA; Standby: 15mA

Button Definition



Button definition as follows (from left to right)

- UP ↑
- DOWN ↓
- LEFT ←
- RIGHT →
- ENTER/PLAY/PAUSE
- MENU
- SETUP

Main Menu

The main menu can be accessed by pressing the MENU button and displays icons for all the preferences and options. Rotate between the icons by pressing the **←** or **→** buttons and press ENTER to edit or view information for that setting.



Menu Icons

- Photo
- Music
- Photo + Music
- Movie
- Setup
- Calendar
- Clock
- Auto Power
- Edit
- Favorite

Power on/off Operation

Display starts after unit power is turned on.


OPTIONAL VIDEO DISPLAY

Settings

Time Settings

In the main menu, press **←** or **→**, move the cursor to the icon **CLOCK** and press **ENTER** to select clock function.


Press **↑** or **↓**, move the cursor to **SET TIME**, then press **ENTER** to select the function to set time.

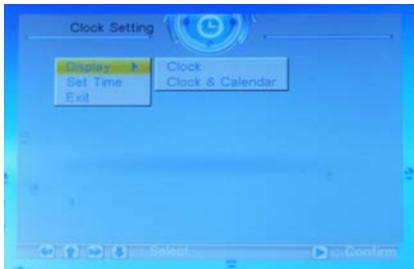

Press **←** or **→** to select **HH/MM/SS** then press **↑** or **↓** to adjust the selected item. If it is ok, press **←**, then press **ENTER** to save the setting.

Date Settings

Select the item **SET DATE** from the menu and then use the same steps as above to adjust the date. After you are done with setting the date, you can then press **ENTER** to save it.

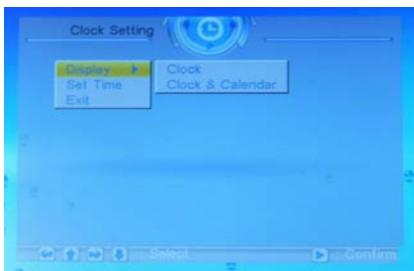

Auto Power

Power On Enable and Power Off Enable will turn the display on or off at a predetermined time. **Leave them both Off to allow the display to run continuously.** Press **↑** or **↓** to select **AUTO POWER ON/OFF**, to set the function of power on/off.

To set Power On Enable (if desired):

Press the arrow buttons to move the cursor to **ON**, press **ENTER** to save it.

OR

Press the arrow buttons to move the cursor to **OFF**, press **ENTER** to save it.

OPTIONAL VIDEO DISPLAY

Auto Power (cont'd)

To set Power Off Enable (if desired):

Press the arrow buttons to move the cursor to ON, press **ENTER** to save. **OR** Press the arrow buttons to move the cursor to OFF, press **ENTER** to save.

If the Power Off Enable is OFF then the display will function as long as power is applied.

If the Power On Enable and/or Power Off Enable are used, the Power On and Power Off times must be set. To set the time of Power on/off: Move the cursor to SETTIME, the power on time and power off time can be set separately. It is similar to setting the clock.

Note: The clock must be set for this to function properly.

After finishing above setting, move the cursor to EXIT, press **ENTER** to exit the setting and save the changes.



OPTIONAL VIDEO DISPLAY

Images

Images and videos must be stored on a Secure Digital (SD) memory card. A 1G card is recommended. Place the image (JPG) and the video (AVI) files directly onto the SD card. The Display will automatically play the images and videos on the card on rotation.

The images (JPG) can be rotated by pressing the buttons as follows while it is playing. Each image must be set individually.

- Mirrors image left to right
- Mirrors image top to bottom
- Rotates image clockwise
- Rotates image counter clockwise

NOTE: The orientation will return to the original position when power is removed. It is recommended that the actual JPG or AVI image be rotated to the desired orientation prior to placing the file on the SD card. This can be done in the readily available graphics programs.

The videos (AVI) can not be rotated or mirrored. The volume can be changed as follows only while the video is playing.

Press or to change the volume.

System Setup

Press SETUP button located next to MENU button for access to clock settings (contains clock setting, set date, auto power and sensor), custom setup (contains language and display setup) and the option to return to default settings.

Clock Settings

Set time with arrow buttons and press OK on the screen.

Set Date


Set date with arrow buttons and press OK on the screen.

Auto Power

Set auto power timing on and off with arrow buttons in the same way as explained on pages 46 and 47.

Sensor


Set time of sensor setting or turn off and press ENTER to set.

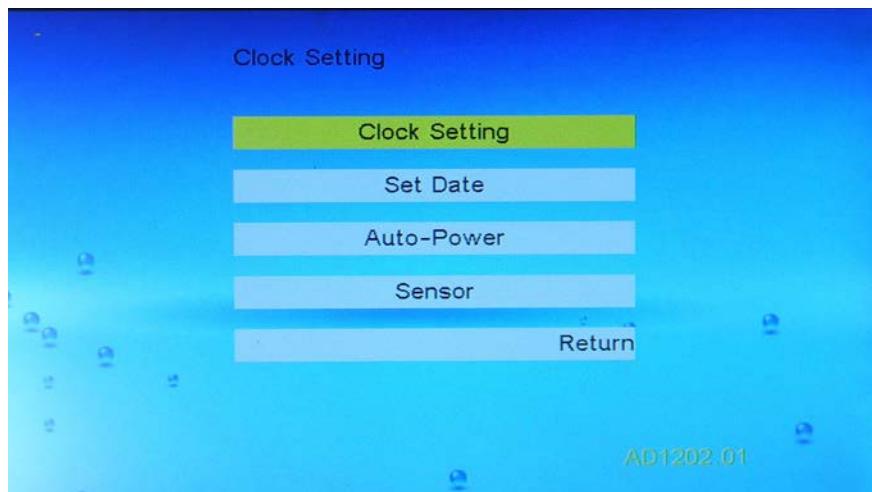


OPTIONAL VIDEO DISPLAY

System Setup (cont'd)


Press SETUP button located next to MENU button for access to custom setup (language and display setup) and default option.

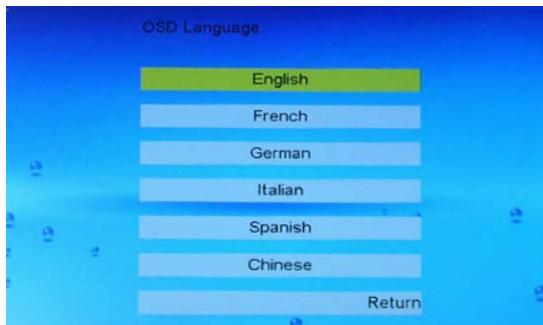

Press the arrow buttons to select OSD LANGUAGE there are English/French/German/Italian/Spanish/etc for selection, press ENTER to save after certain language is selected.

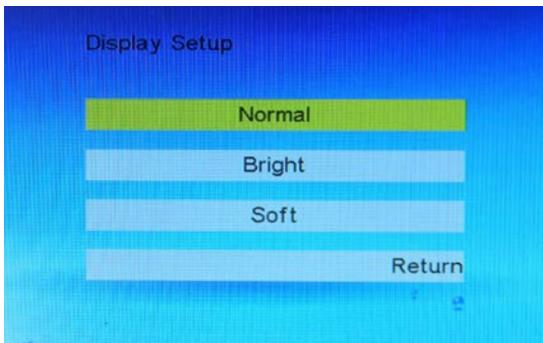

Press the arrow buttons to select DISPLAY SETUP and select the brightness that you need from the options. Press ENTER to save your selection.

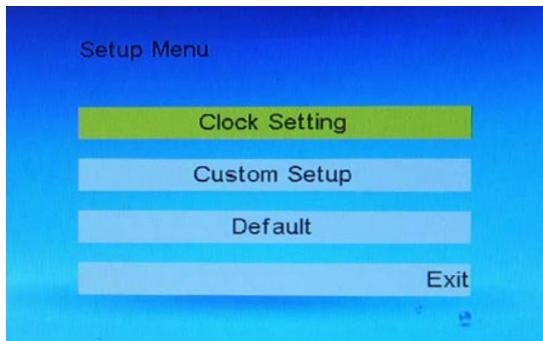

Press \uparrow or \downarrow to select DEFAULT to restore the configuration to the original default settings.

Report Printer

If your dispenser has the optional printer upgrade kit installed, the unit is capable of generating a hard copy report of all the accounting information in the unit. The unique design of the printer upgrade kit allows one printer to generate a report for any number of dispensers.

Generating the Report

To print out the hard copy report, complete the following steps:

1. Unlock and open the main cabinet door and enter your four digit PIN #.
2. Plug the report printer into the printer port located below the keypad inside the cabinet. See page 14 for reference.
3. From the main menu press 7.

NOTE: If your dispenser does not have the optional printer upgrade kit installed, when you press 7 from the main menu, the display will read as follows:

PRINTER OPTION
REQUIRED

After a short delay, the LCD will automatically return to the main menu. (Contact your Arrow Distributor if you would like this option.)

If you do not plug in the printer when you select 7 from the main menu, the display will read as follows:

PRINTER NOT
DETECTED

After a short delay, the LCD will automatically return to the main menu. Plug in the printer, or turn the printer on and press 7 again.

OPTIONAL REPORT PRINTER

Printer Report (cont'd)

NEVADA GOLD REPORT

MON OCT 19 1998
10:52:56

SERIAL NUMBER:
0000000

PIN POSITION #5

COLUMN #1
PRICE: \$0.00
TOTAL TICKETS DISPENSED: 0
RESETTABLE TOTAL: 0

COLUMN #2
PRICE: \$0.00
TOTAL TICKETS DISPENSED: 0
RESETTABLE TOTAL: 0

COLUMN #3
PRICE: \$0.00
TOTAL TICKETS DISPENSED: 0
RESETTABLE TOTAL: 0

COLUMN #4
PRICE: \$0.00
TOTAL TICKETS DISPENSED: 0
RESETTABLE TOTAL: 0

TOTAL OF ALL COLUMNS: 0
RESETTABLE TOTAL: 0

TOTAL CASH ACCEPTED: \$0.00

RESETTABLE CASH TOTAL: \$0.00

----- END OF REPORT -----

The printer will print a report similar to image on the left. This report details all the accounting information present in the dispenser, including:

- The date and time the report was generated,
- The serial number of the dispenser,
- The PIN position # of the person generating the report,
- The price, total tickets dispensed and resettable total tickets dispensed by column,
- The total number of tickets dispensed in all columns,
- The resettable total number of tickets dispensed in all columns,
- The total amount of cash accepted and,
- The resettable total amount of cash that is accepted.

Information for Player

Player instructions are located on the LCD on the front of the dispenser underneath the bill acceptor.

Dispensing Tickets

Players must check the LCD display for ticket dispensing instructions. The unit only accepts currency when the doors are locked and the bill validator light appears green.

When the doors are locked and no credits appear, the LCD display appears as follows on models that accepts only bills:

INSERT BILL
NO CHANGE GIVEN

Once you insert money into the machine, you see:

\$00.00 CREDIT

Note: \$00.00 represents the amount of the credit available. Selecting the PLAYALL Button. Use the PLAYALL feature to dispense 100 tickets maximum from a single column (or 100 tickets randomly from all columns set at the same price on random models). If all credits are not used up, the remaining credits will be displayed when vending is completed. When you select the PLAY ALL button, the following screen will appear:


\$00.00 CREDIT

PLAYALL

PLAYER INFORMATION

Selecting a Column Button

You can dispense tickets one at a time by selecting a particular column. When you select a column, the following display appears on the LCD:

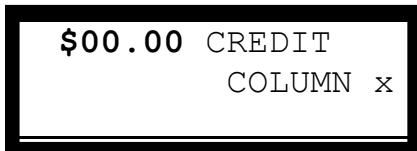

Note: the column number selected appears, not x.

On random models, a single ticket will be dispensed randomly from any column set at the chosen price.

Basic Care

Your model of the Nevada Gold™ Pull Tab Dispenser has been manufactured to exceed mechanical and electronic standards. The following information will assist you in the care and maintenance of your unit.

- Keep the unit dry. If it gets wet, immediately turn off power and unplug unit followed by wiping it dry. Liquids can damage the electronic circuits of the unit.
- Wipe the unit with a damp cloth and a drop of liquid fabric softener to keep it looking new. Do not use any abrasive cleaning materials or solvents to clean your model.
- Handle any removed parts gently and carefully. Dropping or mishandling parts can damage electronic components.
- Use plastic cleaning implements or a soft cloth to remove dust from inside the unit. Metal tools can damage electronic parts.
- Use light lubricants and precision oiling implements to lubricate the rollers, shafts and the chute door.

Lubricating Chute Door

When dust from the tickets accumulates, the chute door can stick or become difficult to open or close. To prevent this from happening, lubricate the four pins on the chute door every three to six months. Using an aerosol lubricant with a straw attachment, spray each of the four pins carefully.



Lubricate chute door at 4 guide pins

CLEAN EVERY
3-6
MONTHS

CARE & MAINTENANCE


Lubricating the Column Roller Shafts

Occasionally, the accelerator rollers can grind or squeal. To prevent this from happening, you should lubricate the rollers and the transfer shaft every three to six months. We recommend applying all lubricants from the outside ONLY!! "between red block & gears" to avoid getting oil on the rollers surface.

1. Apply one drop of light oil with precision oiler on each side of the accelerator roller and the transfer shaft.
2. Press light weight bearing grease into the bearings using a tongue depressor.

- 1 Use Light Precision Oil
- 2 Use Bearing Grease

CLEAN EVERY
3-6
MONTHS

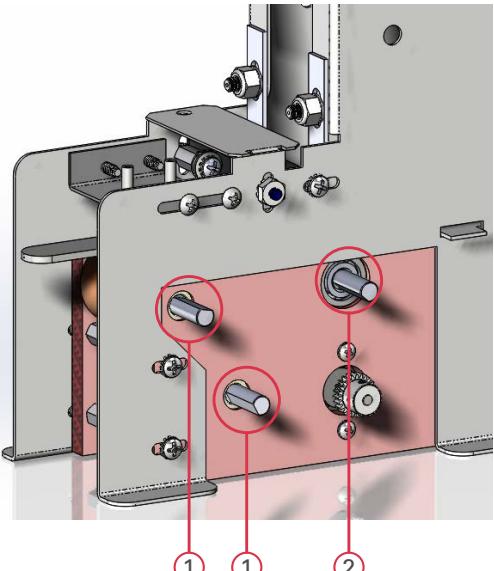

Cleaning The Column Ticket Counting Sensor

About every 100,000 tickets or three months, you should remove any dust build-up from the ticket counter infrared sensor. Failure to do this could result in miscounting of tickets. To clean the sensor:

1. Looking from the front of the dispenser, insert a Q-Tip, underneath the sensor.
2. Gently rub the bottom of the sensor to remove the paper dust, or
3. Use a can of compressed air to blow out the dust.

CLEAN EVERY
100,000 TICKETS
OR
3 MONTHS


Preventative Maintenance & Cleaning The Bill Validator

Dust and particles of dirt can accumulate on the Bill Validator's sensors and rollers during normal operation, negatively impacting the performance of the device. To prevent this, you should clean the bill validator every 6 months or 60,000 bills whichever comes first. In cases of adverse conditions (high humidity, dusty environment, temperature, etc.) increase frequency of cleaning.


Tools Needed

- Compressed air (clean and dry supply)
- Cotton swabs
- Soft, moist cloth
- Isopropyl alcohol

CLEAN EVERY
60,000 TICKETS
OR
6 MONTHS

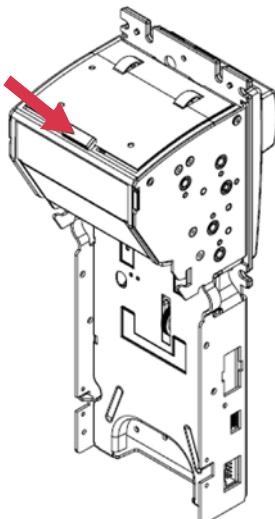

Push the button

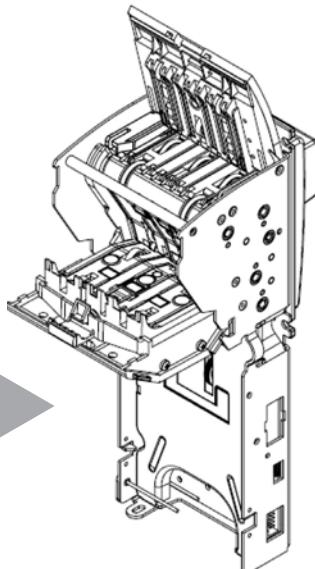

Open guides

1. Open covers of Bill Validator

- Remove the cassette
- Open the clamshell to expose bill paths and sensors by pushing the button as shown above

CARE & MAINTENANCE


Preventative Maintenance & Cleaning Bill Validator (cont'd)

2. Sensor Cleaning

- Use compressed air, removing all fine dust and loose particles
- Clean sensors using the soft moist cloth (moisten cloth with clean water ONLY)
- Be sure there is no dust accumulation, scratches or other mechanical damage as performance will be greatly impacted.

3. Transport Drive Mechanism

- First blow with compressed air the entire bill path, giving special attention to the wheels and rollers
- Use the soft moist cloth to remove contaminants still remaining
- In the case of extremely contaminated rollers and rubber o-rings, use the cloth with isopropyl alcohol

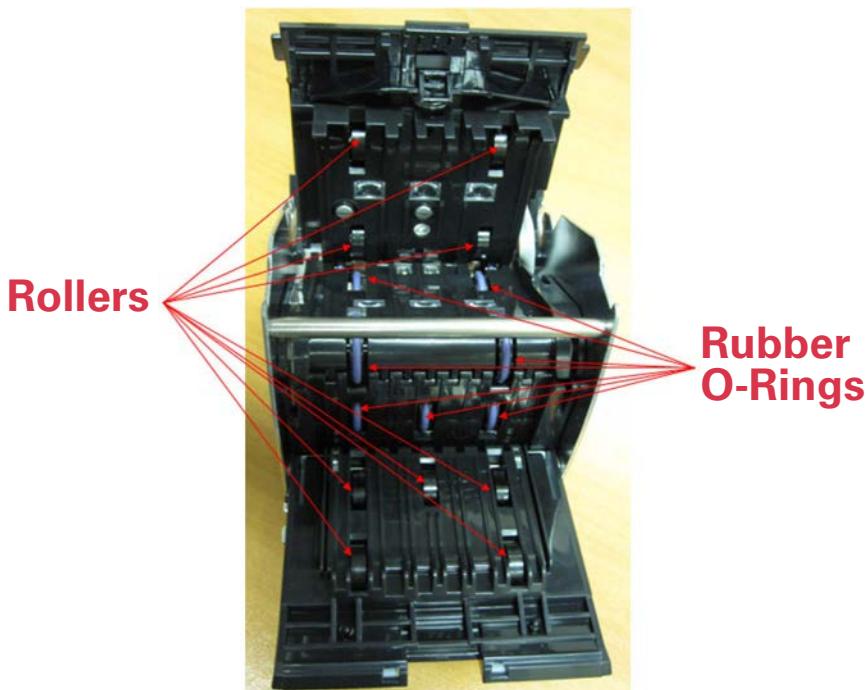

Clearing Jammed Bills

If a severely damaged bill is inserted into the bill acceptor, there is a possibility that the bill may jam when it goes into the stacking cassette. To remove a jammed bill:

1. Remove the cassette carefully, trying not to damage the jammed bill (See page 31.)
2. Open the two covers of the banknote pathway by pressing the button labeled "PUSH".
3. Remove the jammed bill.





**SEE PAGE 68 FOR MORE ON
BILL VALIDATOR DIAGNOSTICS**

CARE & MAINTENANCE

Replacing a Ticket Column


If a ticket column requires replacement, complete the following steps:

1. **Unplug the dispenser.**
2. **Disconnect the battery wire.**
(See Page 15)
3. Loosen the column retaining plate that is located beside the wide opening between every second column. Use a 3/8 inch socket wrench to loosen the nut and rotate the plate from horizontal to a vertical position.
4. Disconnect the 14 Conductor Ribbon Cable located on back plane and remove the five Philips screws from back plane (see page 61 photo).
5. Pull the backplane circuit board straight out to disconnect the pins from the columns.
6. Place the circuit board, with the pin connectors facing up, on a level surface to avoid damaging the pins.
7. Place one hand on the top of the column, one hand on the bottom of the column and slide the column out of the unit.
8. Slide the new column in, making sure that the column fits in properly.

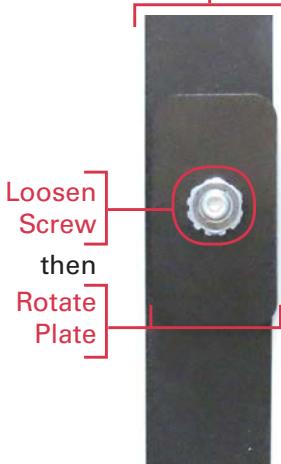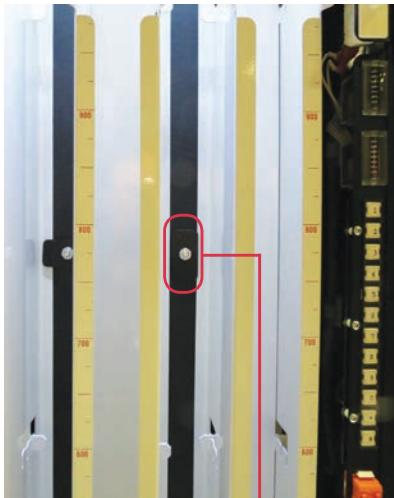

Replacing a Ticket Column (cont'd)

9. Align the pins on the backplane circuit board with the plugs on the column circuit boards. (You may have to adjust the position of the columns slightly to ensure this.) You must ensure that the pins are aligned correctly. Push the pins gently in place.
WARNING: Failure to align backplane pins to column board properly can result in damage to main PCB & optical sensors
10. Put the circuit board in its correct place and screw in the five screws. Replace the 14 Conductor Ribbon Cable.
11. Return the retaining plate to the horizontal position and tighten the retaining plate.
12. Connect the battery. (See page 15 for details.)
13. Plug in the unit.
14. Test vend tickets from each column to ensure that the circuits are connected. (See page 25 for testing instructions.)

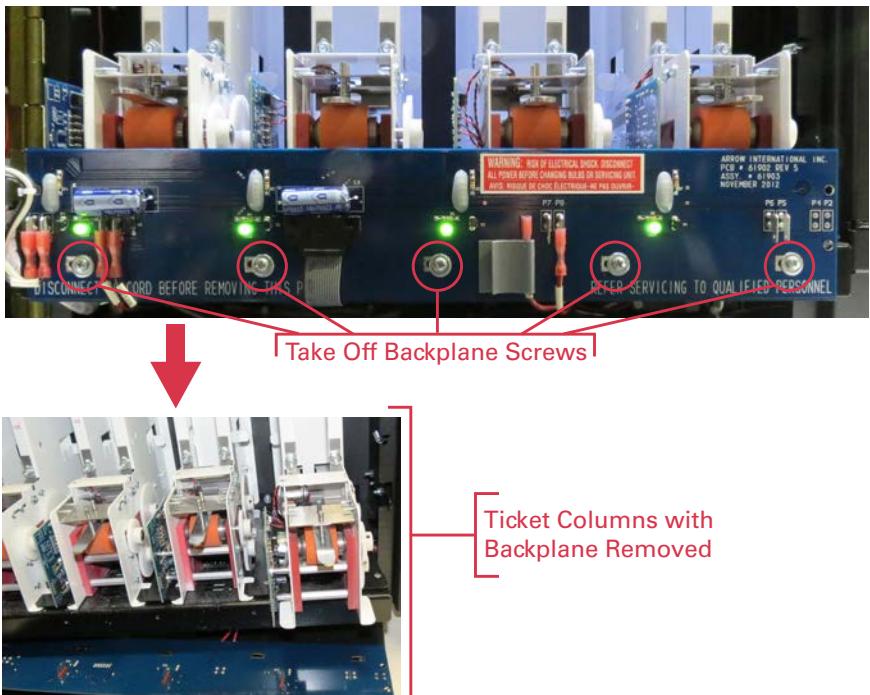


CARE & MAINTENANCE

Adjusting For Different Ticket Thickness

The Nevada Gold™ Pull Tab Dispenser adjusts to accommodate tickets that vary in thickness. To make the adjustment, you require one 11/32 inch socket.

- ① Accelerator Pressure Shoe
- ② Gate Height Adjustment Nuts
- ③ Connector for Backplane
- ④ Ticket Count Sensor
- ⑤ Ticket in Proper Position

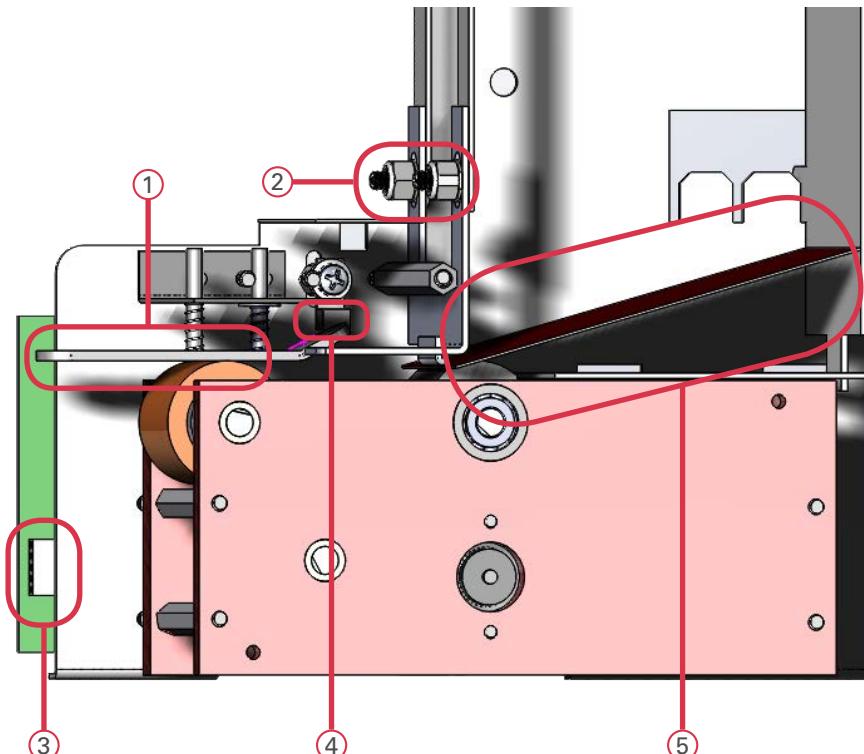

Adjusting For Different Ticket Thickness (cont'd)

1. Loosen gate height adjustment nuts on side of the ticket feeder.
2. Adjust upwards for thicker tickets and down for thinner tickets.
3. Test adjustment.
 - Slide a single ticket down the ticket chute.
 - If the ticket slides through the feeder, the gap is too wide for the ticket. Adjust downwards.
 - If ticket does not feed through feeder when large white gear is turned, gap is too narrow for ticket so adjust upwards.
 - If the ticket stops at the front edge of the stainless steel gate and moves forward when the large white gear is turned, the adjustment is complete. (See diagram, on page 62.) **Notice that the ticket is sitting in the column at an angle.**
4. Tighten the nuts gradually, alternating from side to side to ensure that the edge of the gate stays parallel with the ticket.
Do not over tighten.
5. Test vend tickets from each of the column to ensure that the correct number of tickets dispense. (See page 25 for testing instructions.)

 **Note:** The dispensing columns are factory preset to accept tickets .024 inches thick. You do not have to adjust the columns unless you are using a ticket that has a different thickness.

Ticket thicknesses can vary due to storage conditions. Humidity, heat, or cold can sometimes vary ticket thickness or severely warp the ticket. To insure proper operation store your tickets in a dry place with humidity between 30-45% and avoid direct sunlight.

OPTIONAL RANDOM TICKET DISPENSE

Random Ticket Dispense

When in random dispense mode, 'Play All' switch will randomly select up to 100 tickets from columns until credits are depleted. Only columns that are of the same price will dispense tickets.

If you would like this function installed, contact your local Arrow distributor for more information.

You will need to set pricing on at least 2 columns to be able to use the 'Play All' function when in random dispense.

TROUBLESHOOTING

PROBLEM: **An incorrect number of tickets continue to dispense from a column.**

EXPLANATION:

1. Check ticket pricing for the column. Make sure that the price of the ticket matches the price set for the column; or
2. Clean the optical sensor, see page 56.
3. Check the optical sensor. Make sure the sensor is aligned. If the sensor is out of place, see page 42 for details on aligning the sensor.

PROBLEM: **Remaining credits do not dispense after the AC power is disconnected.**

EXPLANATION: Connect the back-up battery. See page 15 for details.

PROBLEM: **Credits display but no tickets dispense.**

EXPLANATION:

Check the value of the tickets in the dispenser. If the remaining tickets in the dispenser are not divisible by the credit amount; for example, a \$1.00 credit displays, but the machine has only \$2.00 tickets.

2. Enter more money.
3. Fill an empty column with a ticket of a different value. See Loading an Empty Column on page 19 for details and reference.

PROBLEM: **LCD displays text but the back lighting is not on and the bill acceptor light is red.**

EXPLANATION: No AC power to unit. Make sure AC power supply is plugged in and the ON/OFF switch is ON.

TROUBLESHOOTING

PROBLEM: **Bill acceptor does not accept currency and the indicator light remains red.**

EXPLANATION:

1. Check the amount of credit already established. If more than \$100.00 worth of credit appears, tickets must be dispensed until a credit value of \$100.00 or less appears; or
2. Check to ensure that the cabinet door is locked. No cash is accepted when the cabinet door is open; or
3. Check to see if the bill acceptor is full. No cash is accepted when the bill acceptor is full. See page 31 for instructions on emptying the bill acceptor
4. Check bill validator diagnostics, page 68.

PROBLEM: **Tickets do not dispense.**

EXPLANATION: Check the chute door. Tickets do not dispense when the chute door is not completely closed. Lubricate the chute door if necessary, see page 55.

PROBLEM: **Column makes grinding or squealing noise when tickets are dispensing.**

EXPLANATION: Make sure that the unit has been properly maintained. Refer to page 56 on how to lubricate the roller shafts.

PROBLEM: **Tickets do not dispense from column selected.**

EXPLANATION: Is your dispenser a random select model? Tickets will randomly dispense from all columns set to the same price as the column selected.

TROUBLESHOOTING

PROBLEM: "COLUMN EMPTY OR MALFUNCTION" appears on the LCD.

EXPLANATION:

1. The column selected does not have any tickets loaded. Load more tickets into the column. See page 19.
2. On random select models, at least two columns must be set to the same price AND have tickets loaded. See page 19 for loading tickets and page 24 for setting ticket pricing.
3. A ticket could be jammed in the column. See page 41 to clear the jam.

PROBLEM: Alarm activated.

EXPLANATION:

1. Make sure that the cabinet doors are closed and locked. The alarm will sound if any one of the cabinet doors is open and the ticket pricing has already been set; or
2. Make sure that the unit is plugged in. The alarm sounds if the unit is unplugged for more than seven seconds; or
3. A power failure lasting more than seven seconds causes the alarm to sound. To reset alarm:
 - Open door.
 - Enter PIN number.
 - Close and lock door.
 - Plug in, if unplugged, or wait for power to be restored.

PROBLEM CLOCK OPTION REQUIRED or PRINTER OPTION REQUIRED appears on the LCD

EXPLANATION: Dispenser is not equipped with the optional printer upgrade kit. The option on the main menu which was selected is not available until printer upgrade kit is installed. Contact your Arrow distributor for information on obtaining this kit.

Bill Validator Diagnostics

If the red light on the front of the bill validator is ON when the doors are locked and no credit appears, insert a bill and remove it. After the red light goes OFF, count the number of times the light flashes.

# OF FLASHES	EXPLANATION
0	→ No faults - Validator is working properly
1	→ The cassette is removed from the bill validator. Install the cassette. See page 31 for information on cassette.
2	→ The stacking motor does not rotate. Possible jammed bill. See page 41 to clear the jam.
3	→ The cassette is full. Empty the cassette (see page 31 for information on emptying the cassette).
4	→ Mechanical jam in cassette. See page 59 to clear jam.
5	→ There is a stacking motor electrical overload. Contact your Arrow distributor.
6	→ Optical sensors failure. Clean sensors.
7	→ Magnetic sensors failure. Clean sensors.
8	→ Transporting motor does not rotate. Clean the bill pathway (see page 57) or clear jammed bill (page 59).
9	→ The speed of the transporting motor is too fast. Contact your Arrow distributor.
10	→ There is a transporting motor electrical overload. Contact your Arrow distributor.
11	→ The bill pathway security latch is open. Close latch.
12	→ Banknote is in the entry slot of the cassette and credits were not issued. Contact your Arrow distributor.

Physical Characteristics

Power Supply Input

110/120V AC

Power Supply Output

16V AC

Operating Temperature

40°F to 95°F (5°C to 35°C)

Power Consumption

40VA Max.

Dimensions

	4 column
width	24 1/2 inches
height	36 5/8 inches
depth	15 1/4 inches
weight (empty)	145 lbs

8 column

42 5/8 inches
36 5/8 inches
15 1/4 inches
225 lbs

Capitol Bingo Equipment Limited Warranty

Set out below are the terms of the Limited Warranty made by Arrow International, Inc. ("Arrow") in connection with the sale of the Capitol Bingo Equipment (the "Equipment").

1. Limited Warranty

Arrow warrants to the original purchaser ("Purchaser") that the Equipment will, for a period of ONE (1) YEAR from the date of original purchase of any equipment in the product line from an authorized Arrow dealer, be free from manufacturing defects in material and workmanship. Purchaser represents to Arrow that no employee, agent, or representative of Arrow (or of an Arrow dealer) has made any representation or warranty regarding the Equipment except as set out herein.

This Limited Warranty applies to normal commercial use and does not cover failures or damage which (a) occur in shipment; (b) is caused by products not supplied by Arrow; or (c) result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, set-up adjustments or modifications. This Limited Warranty also does not cover (i) any damage to the Equipment resulting from failure to install in strict conformity with both local fire and building codes and regulations, (ii) if installation does not comply with the installation instructions provided by Arrow, or (iii) consumable items such as filters or bulbs.

2. Disclaimer of Warranties

ARROW MAKES NO WARRANTIES, EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR AGAINST INFRINGEMENT OF ANY PATENT), EXCEPT AS EXPRESSLY PROVIDED HEREIN. THE EXPRESS WARRANTIES PROVIDED HEREIN ARE IN LIEU OF AND EXCLUDE ALL OTHER WARRANTIES, GUARANTEES OR REPRESENTATIONS, EXPRESS OR IMPLIED, WHETHER ARISING BY OPERATION OF LAW OR OTHERWISE.

3. Limitation of Remedies

If the Equipment supplied does not conform to the Limited Warranty set out above, Arrow will, at its option, (a) repair or replace the Equipment, or part thereof, which is defective or (b) refund so much of the purchase price as Purchaser has paid for the defective Equipment, less 1/3rd of the purchase price for each month between the date of the purchase from an authorized Arrow dealer and the date of the discovery of the defect, provided that written notice of the defect and its nature is given to Arrow as soon as practical after discovery of the defect, but in no event later than 15 days from the date of the discovery of the defect.

4. Limitation of Liability

The remedy of repair, replacement, or refund of the purchase price is Purchaser's sole and exclusive remedy and will satisfy all of Arrow's liabilities, whether based on contract, negligence, tort, product liability, strict liability, or otherwise. IN NO EVENT WILL ARROW BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, NOR WILL ITS INABILITY IN CONNECTION WITH ANY EQUIPMENT OR SERVICE SOLD (INCLUDING NONDELIVERY OR LATE DELIVERY THEREOF) EXCEED THE SALES PRICE OF SUCH EQUIPMENT OR SERVICE.

5. Warranty Voided

Any obligations of Arrow under this Limited Warranty will be deemed to have been satisfied if anyone other than an authorized Capitol Bingo Equipment Dealer services the Equipment.

6. Transfer Of Limited Warranty

Purchaser may transfer its rights under this Limited Warranty subject to the terms and conditions hereof, to a buyer ("Buyer") from Purchaser of the Equipment. Thereafter, the rights under this Limited Warranty are not transferable. For the transfer by Purchaser of the Limited Warranty to be effective, the following conditions must have occurred no later than the 30th day following the date of resale to Buyer:

- A. Purchaser must have complied with all requirements to make the Limited Warranty effective as to Purchaser; and
- B. The Equipment (as an entire unit and as purchased by Purchaser) must be transferred to Buyer.

7. Inspection

With respect to any claim that the Equipment is defective, Arrow will be allowed a reasonable time to inspect the Equipment, in place. If the Equipment is altered or removed before Arrow has made such inspection or waived its right to do so, the obligations of Arrow under this Limited Warranty will be deemed to have been satisfied.

8. Proof of Purchase

Notwithstanding anything to the contrary in this Limited Warranty, Purchaser must, upon Arrow's request, submit proof of original purchase (satisfactory to Arrow) of the Equipment. The Limited Warranty set out above shall not apply to, nor cover, any Equipment for which Purchaser is unable, upon Arrow's request, to supply such proof of purchase.

9. Limitation of Actions

Any legal action against Arrow for a default of its obligations under this Limited Warranty must be commenced within two years from the date the Equipment was sold by an authorized dealer of the Equipment.

10. How to Obtain Service

If a Problem with this Equipment develops during or after the warranty period, proceed as follows:

- A. Refer to your Operator's Manual and follow the Troubleshooting Table within the "Care and Maintenance" section.
- B. Contact the authorized Capitol Bingo Equipment Distributor from whom you purchased the Equipment.
- C. Contact the Capitol Bingo Equipment Service Manager at 1-800-277-6214

WARRANTY

Capitol Bingo Equipment Limited Warranty (cont'd)

SERVICE CALLS WHICH DO NOT INVOLVE DEFECTIVE MATERIALS OR WORKMANSHIP AS DETERMINED BY ARROW IN ITS SOLE DISCRETION, ARE NOT COVERED. COST OF SUCH SERVICE CALLS ARE THE RESPONSIBILITY OF THE PURCHASER.

Arrow wants you to remain a satisfied customer. If a problem occurs that cannot be resolved to your satisfaction, please contact us immediately. Phone one of the numbers listed on the previous page or write to:

Capitol Bingo Equipment Division
c/o National Service Manager
9900 Clinton Road
Cleveland, Ohio 44144

Arrow Games (Canada) Inc.
1245 Lorimar Drive
Mississauga, Ontario
L5S 1R2

Please be sure to include the name, model number, serial number, date of original purchase, and the distributor from whom you purchased the Equipment, as well as any actions taken to correct the problem.

WARNING

You must keep your receipt or invoice for proof of purchase in order to insure proper warranty coverage.



Arrow Technical Assistance Center

Protecting Your Investments Through Innovative Solutions and Support

Phone Support Hours: 8am to 12am

1-800-277-6214

www.arrowinternational.com

NEVADA GOLD SERVICE LOG

UNIT SERIAL
NUMBER: _____

UNIT PART
NUMBER: _____

INSTALLATION
DATE: _____

If any circuit board
is changed enter the
serial number below

SERVICE DATE	TECHNICIAN NAME	COMPANY NAME	SERVICE PERFORMED	SERIAL #

Refer to the Nevada Gold Manual for recommended maintenance. Roller Cleaning and maintenance can be found at Arrowinternational.com

NEVADA GOLD™ PULL TAB DISPENSING MACHINE

WARNING: You must keep your receipt or
invoice for proof of purchase in order to insure
proper warranty coverage.

ARROW INTERNATIONAL, INC.
ARROW GAMES (CANADA) INC.

www.arrowinternational.com
www.arrowgames.com

Technical Support Hours:
8am to 12 am
1-800-277-6214

Revision May 5, 2015

Nevada Gold



68300

